











ILL №	ADDT №	PART №	DESCRIPTION	QTY
A01	ADD.CON.78.01	0578-511060	CONVERTER ASSY-TORQUE	1
A02	ADD.CAS.74.01	0574-712002	HOUSING ASSY-CONVERTER	1
A03	ADD.SEA.93.01	0593-044084	SEAL - OIL	1
A04	ADD.PUM.78.01	0578-508072	OIL PUMP	1
A05	ADD.PUM.78.02	0578-539082	COVER ASSY-PUMP	1
A06	ADD.SEA.85.01	0585-141029	RING-O	1
A07	ADD.SEA.78.01	0578-045100	GASKET	1
A08	ADD.BRG.85.01	0585-132011	BEARING-NEEDLE	7
A09	ADD.STP.78.01	0578-040052	SHIM-RETAINER	1
B01	ADD.CVR.78.01	0578-659069	CARRIERASSY-FRT COVER	1
B03	ADD.CLT.78.01	0578-125015	CYLINDER-CLUTCH	1
B04	ADD.SEA.74.01	0574-016007	RING-SEAL	1
B05	ADD.SEA.85.02	0585-016014	RING-SEAL	2
B06	ADD.SHT.78.01	0578-689037	SHAFT ASSY - INPUT	1
B07	ADD.STP.78.02	0578-139225	RING-RETAINER	3
B08	ADD.SNP.85.01	0585-139017	RING-SNAP	4
B09	ADD.PIS.78.01	0578-624040	PISTON ASSY-CLUTCH	1
B10	ADD.SPR.78.01	0578-656008	SPRING ASSY-PISTON	3
B11	ADD.DAM.78.01	0578-626003	DAM ASSY-CLUTCH	1
C01	ADD.CLP.78.01	0578-062025	PLATE-CLUTCH	2
C02	ADD.PLT.85.01	0585-193080	PLATE-THRUST	3
D01	ADD.STP.78.03	0578-139226	RING-RETAINING	1
D02	ADD.HUB.78.01	0578-090036	HUB-CLUTCH	1
D03	ADD.SEA.85.03	0585-016013	RING-SEAL SMALL	3
D04	ADD.SEA.93.02	0593-016019	RING-SEAL LARGE	2
D05	ADD.SEA.78.02	0578-016022	RING-SEAL MED	2
D06	ADD.SHT.78.02	0578-689031	SHAFT ASSY-OVERDRIVE	1
D08	ADD.STP.78.04	0578-127077	BUSH	1
D09	ADD.CLT.78.02	0578-625046	CYLINDER ASSY-CLUTCH	1
D10	ADD.SNR.78.01	0578-017017	RING-SPEED SENSOR	1
D11	ADD.STP.78.05	0585-127034	BUSH	1
E01	ADD.PIS.78.02	0578-624039	PISTON ASSY-CLUTCH	1
E02	ADD.DAM.78.02	0578-626002	DAM ASSY	1
E03	ADD.HUB.78.02	0578-090037	HUB-CLUTCH	1
E04	ADD.WAS.78.01	0578-050030	WASHER	2
F01	ADD.HUB.78.03	0578-090038	HUB-CLUTCH	1
F02	ADD.DAM.78.03	0578-626001	DAM ASSY	1
G01	ADD.PIS.78.03	0578-624038	PISTON ASSY-CLUTCH	1
G02	ADD.CLT.78.03	0578-625048	CYLINDER ASSY-CLUTCH	1
G03	ADD.SEA.78.03	0578-016023	RING-SEAL	2
G04	ADD.STP.78.06	0578-127087	BUSH	1

ILL №	ADDT №	PART №	DESCRIPTION	QTY
G05	ADD.STP.78.07	0578-127088	BUSH	1
G06	ADD.HOB.78.01	0578-127083	BUSH	1
G07	ADD.SEA.85.04	0585-141027	RING-O	1
G08	ADD.PLA.78.01	0578-665037	GEAR ASSY-PLANET SUN	1
G09	ADD.HOB.78.02	0578-127082	BUSH	1
G10	ADD.BRG.95.01	0595-132024	BEARING ASSY-NEEDLE	1
G11	ADD.PLA.78.02	0578-165039	GEAR-PLANET SUN	1
H01	ADD.SNP.85.02	0585-139016	RING-SNAP	1
H02	ADD.SPP.78.01	0578-507026	SUPPORT ASSY-CENTRE	1
H03	ADD.STP.78.08	0578-127084	BUSH	1
H04	ADD.BND.74.01	0574-557107	BAND ASSY-REAR	1
H05	ADD.KLN.85.01	0585-190027	STRUT-APPLY	1
J01	ADD.SNP.85.03	0585-139014	RING-RETAINING	1
J02	ADD.RCE.85.01	0585-018013	RACE-OUTER	1
J02A	ADD.CLT.93.01	0593-506013	CLUTCH ASSY	1
J03	ADD.RTN.93.01	0593-107052	RETAINER	2
J04	ADD.SEA.85.05	0585-141020	RING-O	1
J05	ADD.CPL.72.01	0572-159004	CARRIER-PLANETARY	1
J06	ADD.RIV.85.01	0585-020005	RIVET	
J07	ADD.BRG.93.01	0593-053042	SPACER-BEARING	
J08	ADD.WAS.78.01	0540-193058	WASHER	2
J09	ADD.WAS.78.02	0540-193059	WASHER	2
J10	ADD.SHT.72.01	0572-042015	SHAFT-PINION LONG	
J11	ADD.BRG.85.02	0585-131006	BEARING-NEEDLE	
J12	ADD.BRG.55.01	0555-143024	BEARING-NEEDLE ROLLER	
J13	ADD.SHT.85.01	0585-042011	SHAFT-PINION SHORT	
J14	ADD.PIN.91.01	0591-163004	PINION-PLANETARY LONG	
J15	ADD.PIN.91.02	0591-163005	PINION-PLANETARY SHORT	
J16	ADD.COV.95.01	0595-039001	COVER-PLANETARY	
K01	ADD.WAS.95.01	0595-193081	WASHER	1
K02	ADD.BRG.55.02	0555-143029	BEARING ASSY-NEEDLE	1
K03	ADD.STP.55.01	0555-132017	BUSH	1
K04	ADD.SHT.78.03	0578-671128	SHAFT ASSY-OUTPUT 4WD	1
K04	ADD.SHT.78.04	0578-671126	SHAFT ASSY-OUTPUT 2WD	1
K05	ADD.SEA.85.06	0585-016015	RING-SEAL	1
K06	ADD.BRG.85.03	0585-132013	BEARING ASSY-NEEDLE	1
K07	ADD.GER.78.01	0578-162017	GEAR-ANNULUS	1
K08	ADD.SNP.55.01	0555-139075	RING-SNAP	1
L01	ADD.VLB.78.01	0578-736137	BODY ASSY-VALVE	1
L02	ADD.WIR.78.01	0578-640121	WIRING ASSY-ROOM	1
L03	ADD.FLT.78.01	0578-738007	FILTER ASSY-OIL	1

ILL №	ADDT №	PART №	DESCRIPTION	QTY
L04	ADD.SEA.85.07	0585-045045	GASKET-OIL PAN	1
M01	наш номер	0578-640127	SWITCH ASSY-INHIBITOR	1
M02	ADD.SEA.78.04	0578-420037	GASKET	1
M03	ADD.SEA.78.05	0578-420038	GASKET	1
M04	ADD.SEA.93.03	0593-141045	RING-O	1
M05	ADD.CRC.93.01	0593-052010	CORC SCREW	1
UCF	ADD.FDC.78		DISC-CLUTCH OUTER	
	ADD.CLP.78.02	0578-166053	1.9 mm	3
	ADD.CLP.78.03	0578-166054	2.2mm	3
	ADD.CLP.78.04	0578-166055	2.4mm	3
	ADD.CLP.85.01	0585-166007	2.0mm	3
	ADD.CLP.85.02	0585-166026	1.8mm	3
UCD	ADD.MDC.93.01	0593-666022	DISC ASSY-CLUTCH	3
DV1	ADD.SHT.78.05	0578-689030	SHAFT & HUB ASSY-OVERDRIVE	1
	ADD.RMK.78.01		Состоит из: 0578-166053-3шт, 0578-166054-3шт, 0578-166055-3шт, 0585-166007-3шт, 0585-166026-3шт, 0593-666022-3шт, 0578-656008-3шт, 0578-050030-2шт, 0578-062025-2шт.	1
	ADD.RMK.78.02		Состоит из: 0585-132011-7шт, 0585-139017-4шт, 0578-139225-3шт, 0585-193080-3шт, 0593-107052-2шт, 0578-040052-1шт, 0585-127034-1шт, 0595-132024-1шт, 0585-139014-1шт.	1
	ADD.RMK.78.03		Состоит из: 0585-016013-3шт, 0593-016019-2шт, 0578-016022-2шт, 0578-016023-2шт, 0593-044084-1шт, 0585-141029-1шт, 0578-045100-1шт, 0585-141027-1шт, 0585-141020-1шт, 0585-045045-1шт, 0578-420037-1шт.	1