




ILL №	ADDT №	PART №	DESCRIPTION	QTY
A01	ADD.CON.11.01	0511-511061	CONVERTER ASSY-TORQUE	1
A02	ADD.SHM.11.01	0511-037082	SHIM	2
	ADD.SHM.11.02	0511-037083	SHIM	2
	ADD.SHM.11.03	0511-037084	SHIM	2
	ADD.SHM.11.04	0511-037085	SHIM	2
	ADD.SHM.11.05	0511-037086	SHIM	2
A03	ADD.BRG.11.01	0511-133055	BEARING ASSY-NEEDLE ROLLER	1
A04	ADD.FLT.11.01	0511-738008	FILTER ASSY-OIL	1
A05	ADD.SEA.93.01	0593-044084	SEAL - OIL	1
A06	ADD.SEA.55.01	0555-141079	O-RING	1
A07	ADD.SEA.11.01	0511-045109	GASKET-PUMP COVER	1
A08	ADD.BRG.55.02	0555-143029	BEARING ASSY-NEEDLE	2
A09	ADD.WAS.95.01	0595-193081	WASHER-THRUST	2
A10	ADD.PUM.11.01	0511-539084	COVER ASSY PUMP	1

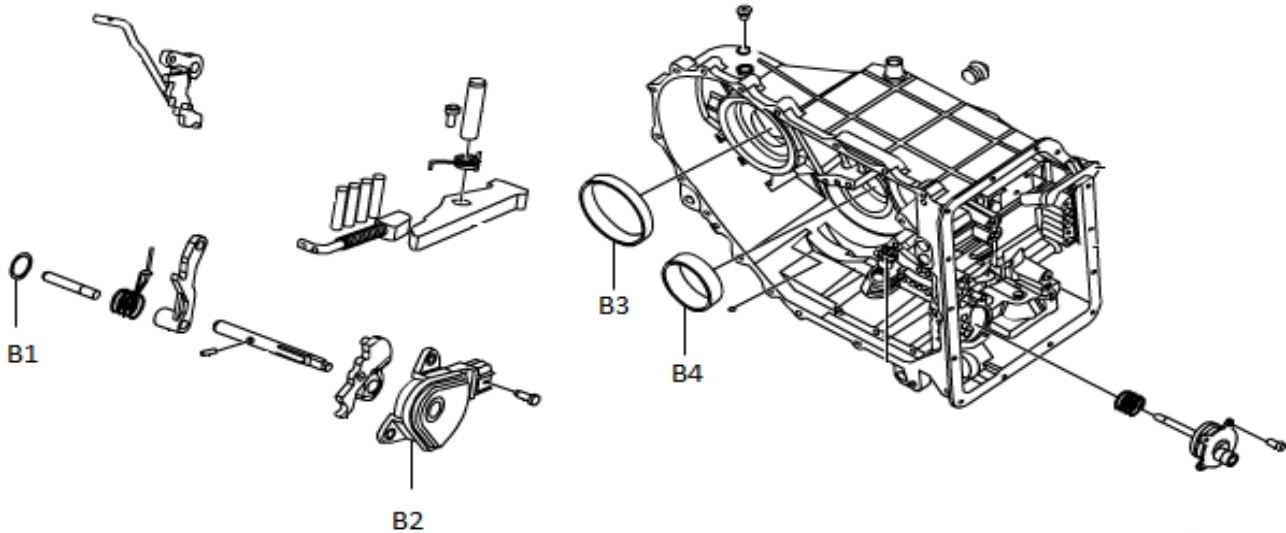


ILL №	ADDT №	PART №	DESCRIPTION	QTY
B01	ADD.SEA.93.02	0593-044080	SEAL OIL	1
B02	ADD.SWH.78.01	0578-640127	SWITCH ASSY-INHIBITOR	1
B03	ADD.BRG.11.03	0511-133058	BEARING ASSY-NEEDLE ROLLER	1
B04	ADD.BRG.11.04	0511-133055	BEARING ASSY-NEEDLE ROLLER	2

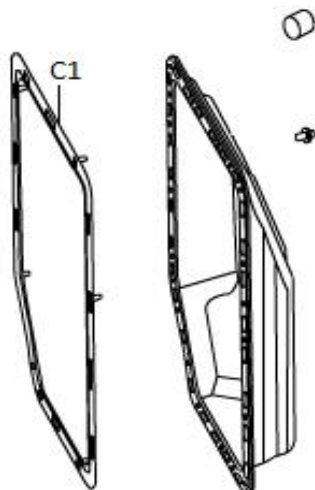


ILL №	ADDT №	PART №	DESCRIPTION	QTY
C1	ADD.SEA.11.02	0511-045116	GASKET-OIL PAN	1
C2	ADD.VLB.11.01	0511-736140	BODY ASSY-VALVE	1

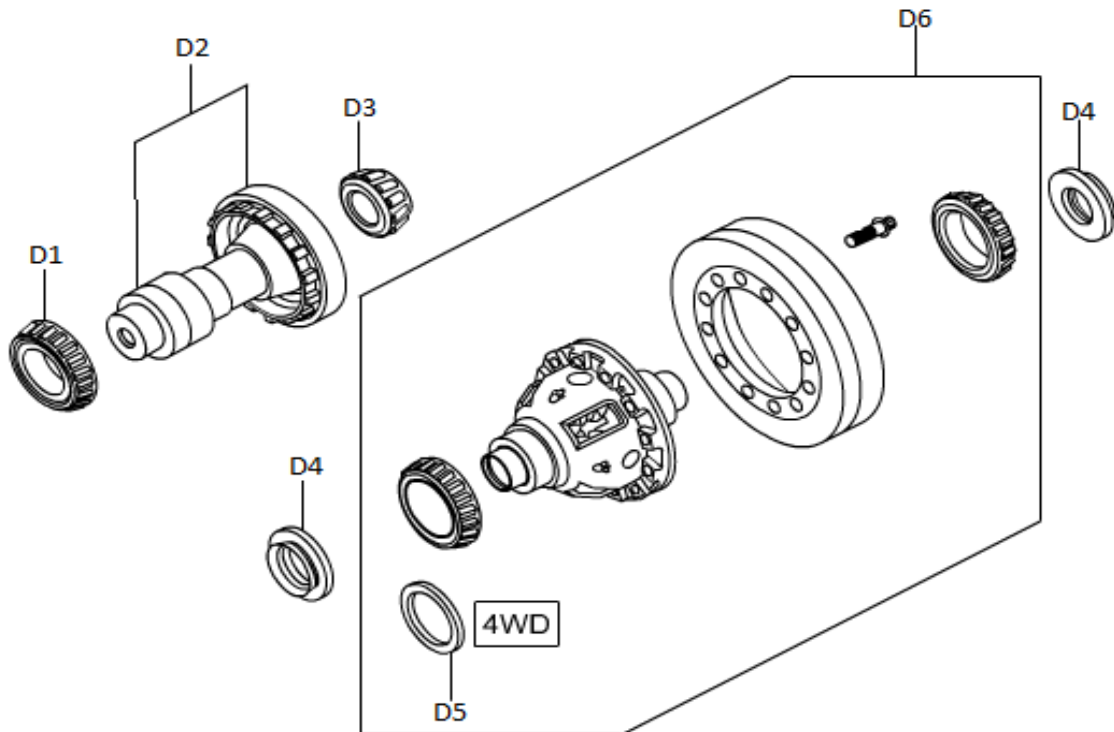



ILL №	ADDT №	PART №	DESCRIPTION	QTY
D01	ADD.BRG.11.05	0511-133056	BEARING ASSY-TAPER ROLLER	1
D02	ADD.SHT.11.01	0511-567015	SHAFT ASSY-INTERMEDIATE	1
D03	ADD.BRG.11.06	0511-133059	CONE-TAPER ROLLER BEARING	1
D04	ADD.SEA.11.03	0511-044149	SEAL-OIL 72X38X7	2
D05	ADD.SEA.11.04	0511-044151	SEAL-OIL AWD 72X55X7	1
D06	ADD.DIF.11.01	0511-698014	GEAR ASSY-DIFFERENTIAL DRIVE 2WD	1
	ADD.DIF.11.02	0511-698015	GEAR ASSY-DIFFERENTIAL DRIVE 4WD	1

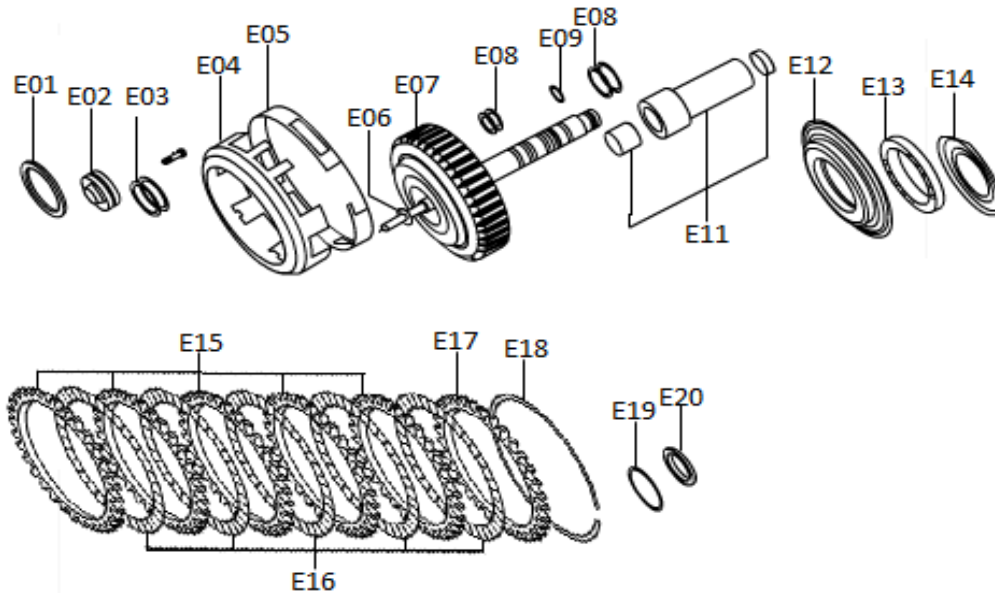

ILL №	ADDT №	PART №	DESCRIPTION	QTY
E01	ADD.BRG.11.07	0511-132034	BEARING ASSY-NEEDLE THRUST	1
E02	ADD.SUP.11.01	0511-507032	SUPPORT-OVER DRIVE	1
E03	ADD.SEA.11.05	0511-016024	RING SEAL	2
E04	ADD.PIS.11.01	0511-624044	PISTON ASSY	1
E05	ADD.SPR.11.01	0511-156208	SPRING PACK-RETURN	1
E06	ADD.SEA.11.06	0585-016013	RING-SEAL	1
E07	ADD.SHT.11.02	0511-689039	SHAFT ASSY-OVER DRIVE	1
E08	ADD.SEA.11.07	0511-016025	RING-SEAL	4
E09	ADD.SEA.11.08	0511-141072	O-RING	1
E11	ADD.PLA.11.01	0511-665038	GEAR ASSY-PLANET SUN	1
E12	ADD.PIS.11.02	0511-624041	PISTON ASSY CLUTCH1	1
E13	ADD.SPR.11.02	0511-156211	SPRING ASSY CLUTCH1	1
E14	ADD.DAM.11.01	0511-626004	DAM ASSY CLUTCH1	1
E15	ADD.MDC.11.01	0511-166061	PLATE-STEEL CLUTCH1 1.7mm	5
	ADD.MDC.11.02	0511-166062	PLATE-STEEL CLUTCH1 1.8mm	1
	ADD.MDC.11.03	0511-166063	PLATE-STEEL CLUTCH1 1.9mm	1
E16	ADD.CLP.11.01	0511-666025	PLATE-FRICTION CLUTCH1	5
E17	ADD.RTN.11.01	0511-062027	PLATE-RETAINING CLUTCH1	1
E18	ADD.SNP.11.01	0511-139231	RING-RETAINING CLUTCH1	1
E19	ADD.SNP.11.02	0511-139232	RING-RETAINING CLUTCH1	1
E20	ADD.BRG.85.01	0585-132011	BEARING ASSY-NEEDLE	1

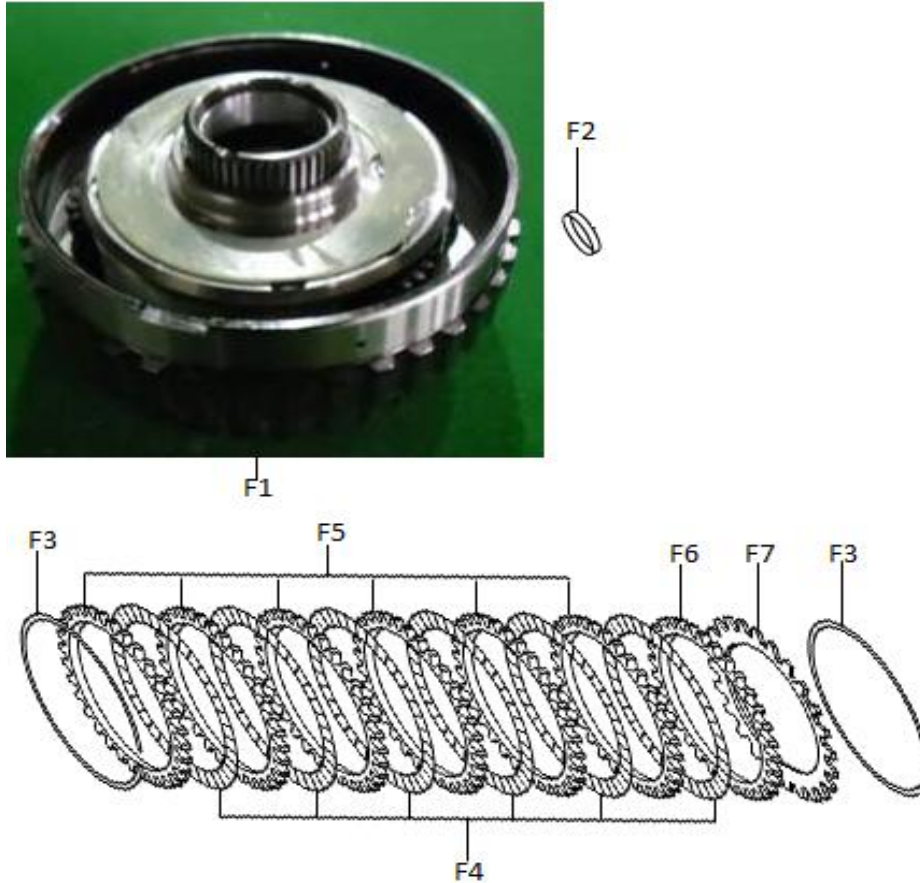

ILL №	ADDT №	PART №	DESCRIPTION	QTY
F01	ADD.PLT.11.01	0511-659074	CARRIER ASSY-RR HUB	1
F02	ADD.STP.11.01	0511-127091	BUSH	1
F03	ADD.STP.11.02	0511-139230	RING-RETAINING	2
F04	ADD.CLP.11.02	0511-666024	PLATE-FRICTION	6
F05	ADD.MDC.11.04	0511-166058	PLATE-STEEL	6
F06	ADD.MDC.11.05	0511-166059	PLATE-STEEL	1
F07	ADD.CLP.11.03	0511-506169	PLATE-FRICTION	1

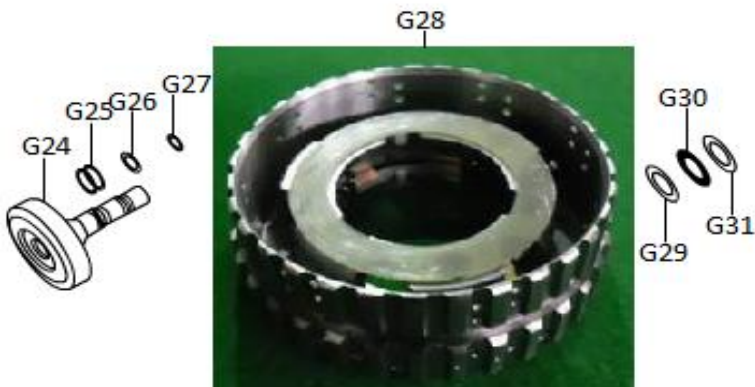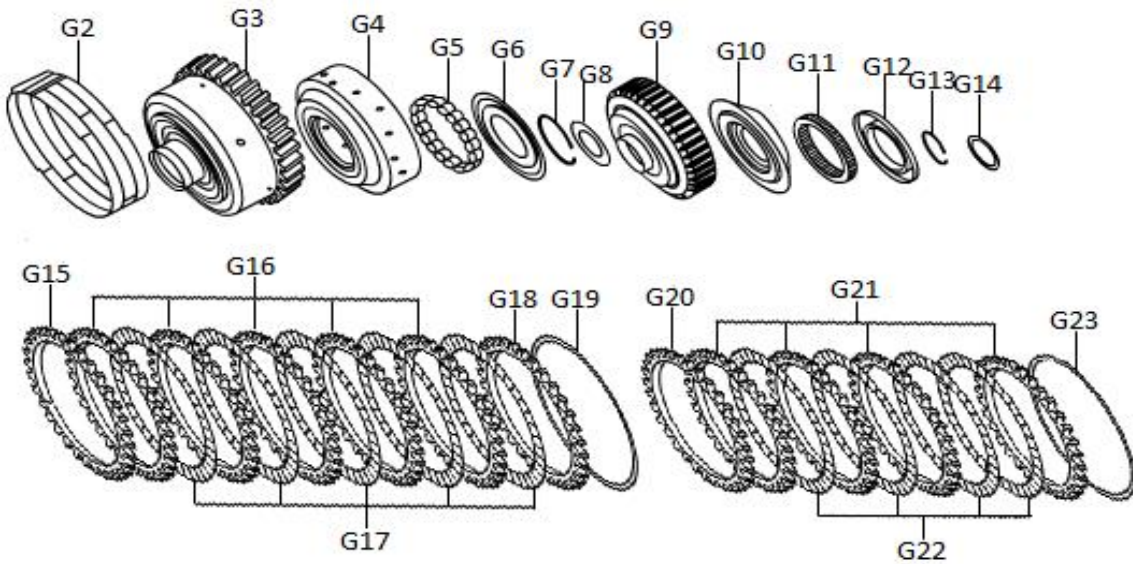

ILL №	ADDT №	PART №	DESCRIPTION	QTY
G01	ADD.SUP.11.02	0511-507025	SUPPORT ASSY-CENTER RR	1
G02	ADD.BND.11.01	0511-557115	BAND	1
G03	ADD.CYL.11.01	0511-625052	CYLINDER ASSY	1
G04	ADD.PIS.11.03	0511-624043	PISTON ASSY CLUTCH3	1
G05	ADD.SPR.11.03	0511-156212	SPRING ASSY CLUTCH3	1
G06	ADD.DAM.11.02	0511-626006	DAM ASSY CLUTCH3	1
G07	ADD.SNP.11.03	0511-139240	RING-RETAINING CLUTCH3	1
G08	ADD.BRG.11.08	0511-132039	BEARING ASSY-NEEDLE THRUST	1
G09	ADD.CYL.11.02	0511-625053	CYLINDER ASSY-CLUTCH HUB	1
G10	ADD.PIS.11.03	0511-624042	PISTON ASSY CLUTCH2	1
G11	ADD.SPR.11.04	0511-156213	SPRING ASSY CLUTCH2	1
G12	ADD.DAM.11.02	0511-626005	DAM ASSY CLUTCH2	1
G13	ADD.SNP.11.03	0511-139234	RING-RETAINING CLUTCH2	1
G14	ADD.BRG.85.01	0585-132011	BEARING ASSY-NEEDLE	1
G15	ADD.WAS.11.01	0511-050031	WAVE WASHER	1
G16	ADD.MDC.11.06	0511-166106	PLATE-STEEL CLUTCH2 2,5mm	5
G17	ADD.CLP.11.04	0511-666027	PLATE-FRICTION CLUTCH2	5
G18	ADD.CLP.11.05	0511-062028	PLATE-RETAINING CLUTCH2	1
G19	ADD.SNP.11.04	0511-139233	RING-RETAINING CLUTCH2 (PISTON)	1
G20	ADD.WAS.11.02	0511-050032	WAVE WASHER	1
G21	ADD.MDC.11.07	0511-166070	PLATE-STEEL CLUTCH3 3mm	4
G22	ADD.CLP.11.06	0511-666026	PLATE-FRICTION CLUTCH3	4
G23	ADD.SNP.11.05	0511-062029	PLATE-RETAINING CLUTCH3	1
G24	ADD.SHT.11.03	0511-689040	SHAFT ASSY-INPUT	1
G25	ADD.SEA.85.02	0585-016014	RING-SEAL	2
G26	ADD.SEA.11.08	0511-016025	RING-SEAL OIL	1
G27	ADD.SEA.11.09	0511-141076	O-RING	1
G28	ADD.PLT.11.02	0511-659076	CARRIER ASSY-FRONT	1
G29	ADD.WAS.95.01	0595-193081	WASHER-THRUST	A09
G30	ADD.BRG.55.02	0555-143029	BEARING ASSY-NEEDLE	A08
G31	ADD.SHM.11.06	0511-037097	SHIM 0,127mm	1
	ADD.SHM.11.07	0511-037098	SHIM 0,257mm	
	ADD.SHM.11.08	0511-037099	SHIM 0,198mm	